

# SANIp<sup>ass</sup> MOBILE DISINFECTION CHAMBER

## ALL-IN-ONE USER-FRIENDLY SANITIZING STATION

### EASY TO INSTALL COMPLETE KNOCKDOWN (CKD) DESIGN

#### ALL-IN-ONE MOBILE DISINFECTION

- Infrared Sensor Auto Start-Stop Activation
- Head-To-Toe All Around Mist Coverage
- Wheelchair-Friendly Foldable Ramp
- Suitable For All Types Of Footwear
- Mist Collection Tray With Drainage
- User-Friendly Traffic Indicator Light
- LED Light With Transparent Panels

#### Optional Features:

- Automated Hand Sanitizer
- Pass-Through LED Foot Traffic Counter
- Liquid Level Indicator

#### ROBUST CONSTRUCTION


- 1100mmW x 2000mmL x 2100mmH
- Powder-Coated Gray Finish
- Suitable For Indoor Or Outdoor Use
- Hollow Steel Frame Sections
- Heavy-Duty Wheels With Brakes For Safety




WHEELCHAIR  
ACCESSIBLE




ANY TYPE OF  
FOOTWEAR

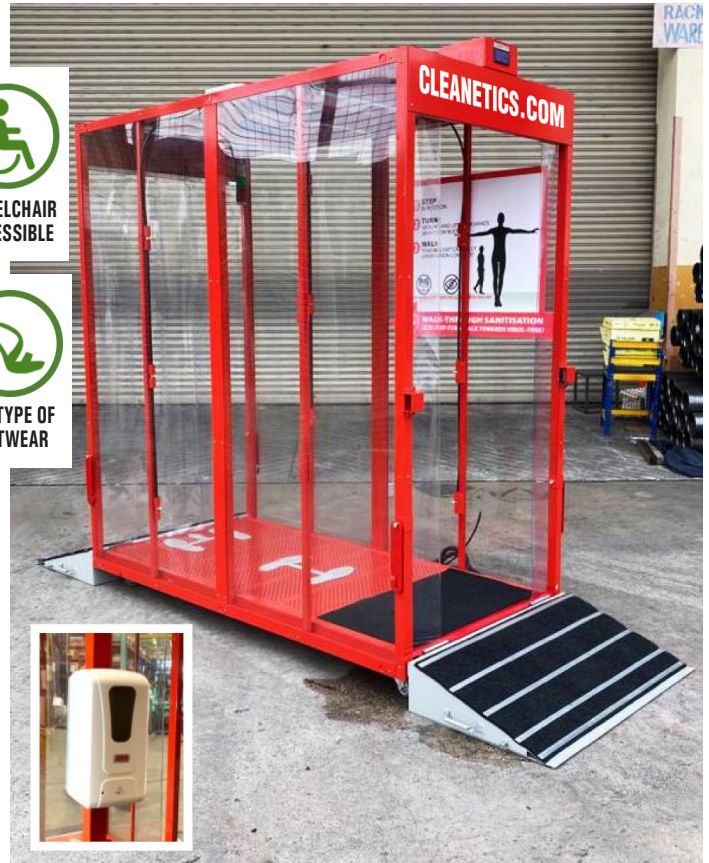

Non-Slip Rubber Carpet on Ramp

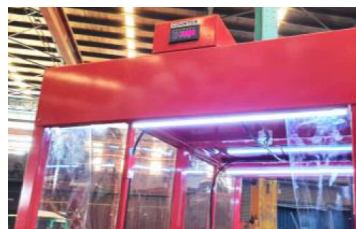

Pass-Through LED Foot Traffic Counter

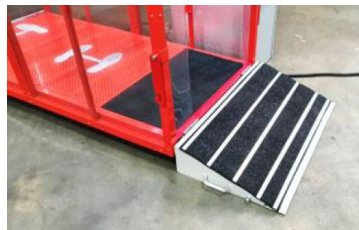

All Footwear and Wheelchair Friendly



Foldable Ramp For Easy Mobilization



SANIp<sup>ass</sup> is distributed in the United States By Cleanetics  
For all inquiries, please contact Deric Haddad at 646-568-0549  
or by e-mail at [deric.haddad@cleanetics.com](mailto:deric.haddad@cleanetics.com)

# **SANI**pass

## **MOBILE DISINFECTION CHAMBER**

**ALL-IN-ONE USER-FRIENDLY SANITIZING STATION**

### **EQUIPMENT CHECKLIST**

1. One (1) Powder Coated Steel Frame Structure with Mist Collection Tray and Four (4) Heavy Duty Wheels
2. One (1) LED Traffic Indicator
3. One (1) Wired Infrared Sensor
4. One (1) Automated Hand Sanitizer
5. Three (3) Ready-for-Installation All Round Nozzle Fitting
6. Three (3) Steel Covers
7. Two (2) Steel-made Footmark
8. Two (2) Foldable Ramp
9. One (1) Control Box with Storage Tank

### **USER MANUAL**

1. Place hand under automated hand sanitizer. Rub and interlace hands for at least 20 seconds
2. Walk on slope into Sanipass chamber and step on sanitizing rubber carpet.
3. LED Foot Traffic Counter will record a new visitor count.
4. Spread your steps on footmark and lift your hands away from body.
5. Keep your eyes close while infrared sensor activation initiates disinfection mist for 10 seconds at front and back.
6. LED Traffic Light Indicator will change from 'Red' to 'Green' followed by a 'beep' sound when sanitization is completed.
7. Walk towards exit carefully and mind your steps

### **STARTING AND STOPPING THE UNIT**

1. Open control box and fill in sanitizing / disinfection liquid into the storage tank.
2. Plug device into wall socket and turn on power supply.
3. Turn on device at ON / OFF switch on Sanipass chamber.
4. Traffic counter, LED Foot Traffic Counter and Infrared Sensor will be activated.
5. You may proceed to use Sanipass as per instructions on user manual.
6. To turn off Sanipass, turn off device at ON / OFF switch on Sanipass chamber.
7. Turn off powder supply at electrical socket.

### **CLEANING AND MAINTENANCE GUIDELINES**

1. Switch off Sanipass at ON / OFF switch and turn off power supply.
2. Put on a pair of rubber glove and face mask before entering Sanipass chamber.
3. Drain off excess liquid on steel tray by opening the valve pipe.
4. Remove carpet inside chamber and put them aside outside of chamber
5. Remove steel-made footmark by unscrewing the screws on two sides of the steel plate.
6. Carefully lift the steel covers and place them outside of chamber.
7. Spray water inside to drain excess contaminated sanitizing liquid and remove dirt and dust on mist collection tray
8. Wash foot sanitizing rubber carpets that has been removed and on ramp as well as steel covers with water and do not use any harsh cleaning agents
9. Leave steel covers and chamber unit to dry or wipe excess water off with absorbent cloth
10. Clean gently with water on adjacent transparent panels and do not put force on panels to avoid damage or cracks.
11. Ensure the used cloth is treated and wash thoroughly with recommended cleaning agents.
12. Place steel covers on mist collection tray and fasten screws of steel-made footmark to secure in position.
13. Lay foot sanitizing rubber carpets on the dedicated mist collection tray.
14. Turn on power supply and switch on Sanipass at ON / OFF switch.
15. Product is ready to use.

**Note:** Check wiring connection of Foot Traffic Counter, LED Traffic Indicator, Infrared Sensor as well as Control Panel on a periodic basis



**SANIPass is distributed in the United States By Cleanetics**  
**For all inquiries, please contact Deric Haddad at 646-568-0549**  
**or by e-mal at [deric.haddad@cleanetics.com](mailto:deric.haddad@cleanetics.com)**